



# PORTALSPLUS™

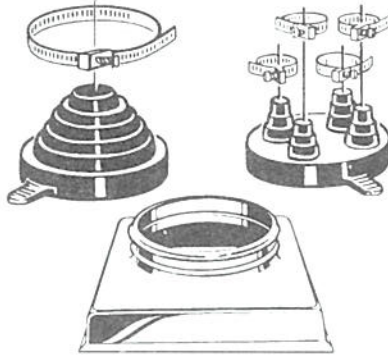


## STEP 1

Check parts to ensure that all necessary components are available.

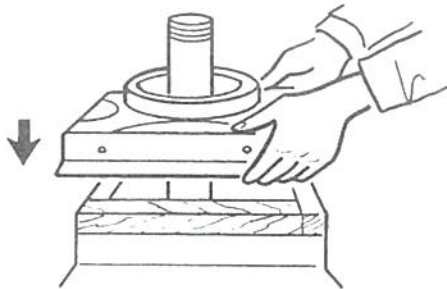


## STEP 2

Flash curb in accordance with roof manufacturer's recommendations and slip curb cover over pipe(s) and seat on curb.

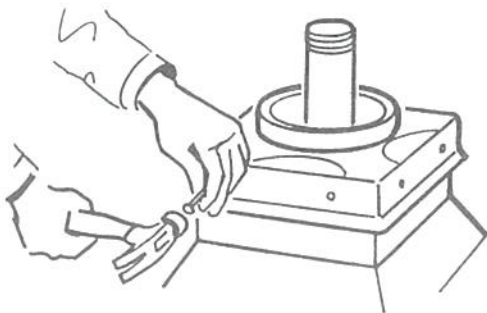

## STEP 3

Nail (or screw) curb cover to curb using prepunched holes in cover.

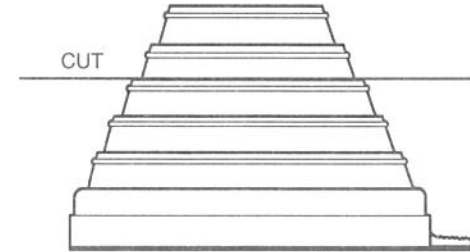

## STEP 4


Select proper step on rubber cap to accommodate pipe(s) being used - cut off nipple above index ring.

NOTE: Rubber cap is not intended to support the pipe.



## STEP 5

Slip cap down over pipe(s) and on to collar. Press around edges to be sure rubber cap is properly seated around the beaded ring of the collar.

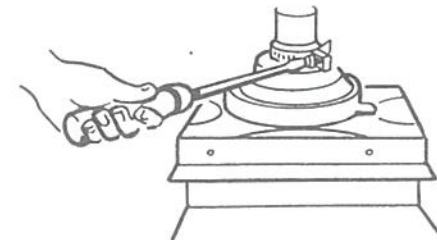

## STEP 6

Install stainless steel clamp around rubber and tighten screw. Complete installation.

Prefabricated Roof Accessories for ALL Roof Systems!